

Wall Switch Operation

View's wall switch gives users the freedom to change tint states by a push of a button.

The wall switch will change the tint state of the glass. The four vertical buttons correspond to the four tint states, ranging from clearest (top) to darkest (bottom).

To change the tint state of the glass, press the desired button once. A flashing light will indicate the glass is currently transitioning to a tint state. The user must wait until the light stops flashing to choose another tint state. After setting a new tint level with the Wall Switch, the glass will remain at that level for three hours (or until you press another button). After three hours, the glass will revert back to its schedule or Intelligence mode.

The transition time depends on the size of the glass.

The circular LED at the bottom left of the wall switch indicates the dynamic glass system is powered.



Indicators

Indicator: All tint button LEDs are off.

If the power LED on the button left corner is illuminated, the window may have entered power save mode and turned off. Press any of the buttons to reactivate.

If the power LED on the button left corner is not illuminated check on the power supply to the control system.

Indicator: All tint button LEDs are flashing.

The controller is in an error state. Hold the top and bottom buttons at the same time for approximately 10 seconds to clear the error. Contact View support for assistance if the error persists.